



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Aspect		Picture / Format
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Repeat		Green / APP / Repeat
	Vol+		Vol+
	S		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	CH-		CH- / Page-
	i		Info / Angle
	Guide		Guide / EPG / -/-
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit / DVD Setup		Exit / Cancel / Clear
	Exit / DVD Setup		Shift + Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Red / Prog		Red / Netflix / Search
	Red / Prog	+	Shift + Red / Netflix / Search
	Green / Step	+	Shift + Green / APP / Repeat
	Yellow / Goto		Yellow / YouTube / Repeat
	Blue / A-B		Blue / Prime Video / Random
	Index / Stop		Pause / Step / Freeze
	Hold / Play/Pause	+	Shift + Stop /
	Hold / Play/Pause		Stop / Hold
	Reveal / <<		<< / Tune-
	Size / >>		>> / Tune+
	FAV / Menu		Fav / Marker / PC
	FAV / Menu	+	Shift + Fav / Marker / PC
	TV.RD / Angle		TV/Radio /
	Mix / <<		<< / Preset-
	S.Page / >>	+	Shift + >> / Preset+
	S.Page / >>		>> / Preset+
	Title		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	Slow		Play / Slow
	Text / Zoom	+	Shift + Text /
	Text / Zoom		Text / Goto
	Cancel /	+	Shift + Eject / Surround
	Cancel /		Eject / Surround

