



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Search	 + 	Shift + TV/R
	Clear		Exit
	Program+		Ch +
	Program-		Ch -
	Return		Back

 

 
 
 

 

 








 
 


 
 
 
 
 
 
 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	HDD/DVD		Media
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Setup		Options
	TV/DVD		Smart
	Video Source		AV
	Function		D. Menu
	Playlist+		Vol +
	Playlist-		Vol -
	Watch TV		TV/R
	Play/Pause		Play
	Play/Pause		Pause
	Stop		Stop
	Record/DUB		Rec


 




Originalfernbedienung Ersatzfernbedienung

	I<< Skip		I<<
	Skip >>I		>>I
	<< Search		<<
	Search >>		>>
	Edit		Red
	Insert CHP.		Green
	Rec Mode	 + 	Shift + Rec
	Timer	 + 	Shift + AV
	Play Mode	 + 	Shift + Play
	Repeat		Text
	Zoom	 + 	Shift + Eject
	A-B	 + 	Shift + Text
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Title		List
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Display		Info

