



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Standby |  | Power |
|  | Open / Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Search |  +  | Shift + TV/R |
|  | Clear |  | Exit |
|  | Program+ |  | Ch + |
|  | Program- |  | Ch - |
|  | Return |  | Back |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------|
|  | HDD/DVD |  | Media |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Select |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Setup |  | Options |
|  | TV/DVD |  | Smart |
|  | Video Source |  | AV |
|  | Function |  | D. Menu |
|  | Playlist+ |  | Vol + |
|  | Playlist- |  | Vol - |
|  | Watch TV |  | TV/R |
|  | Play/Pause |  | Play |
|  | Play/Pause |  | Pause |
|  | Stop |  | Stop |
|  | Record/DUB |  | Rec |



