 











 







 

 

 



 

 

 

 




Originalfernbedienung Ersatzfernbedienung

	ST-BY		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		Smart
	AV		AV
	Menu		Menu
	Text		Text
	Before / P/C		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Next / -/--		Guide
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	PP		Back
	Dual		Dual
	SVC		List





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Spatial		Format
	Size		Eject
	Hold		Stop
	Update		Media
	Index		Info
	Time		Sleep
	Reveal		Options
	Mix		D. Menu
	TXT / M		TV/R

