
 


 
 
 

 









 

 



 

 
 
 

 


 
 














 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Mute		Mute	
Tape 1 Stop		Down	
Preset Pause	 + 	Shift + Pause	
Tape 2 Pre./eq		D. Menu	
Vol Rs+/S.Mode		3D	
CD/Theater		List	
CD Play		Play	
Display		Info	
CD Random		TV/R	
Input/Source		AV	
Woofer/Speed		Subt	
CD Rewind		<<	
Repeat		Text	
Funct./Direct		Smart	
CD F.FWD		>>	
Stop		Stop	
		CD Pause	
		Volume+	
		Tape 1 Hall/Ats	
		Next/Prog+	
		Volume-	
		Prev./Prog-	
		Pr 1	
		Pr 2	
		Pr 3	
		Pr 4	
		Mode	
		Pr 5	
		Pr 6	
		Pr 7	
		Pr 8	
		Pr 9	
		Pr 0/10	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Program	 Sleep		
Intro	 Format		
Disc 1 Eject	 +  Shift + 1		
Tape 1 Rew	 Left		
Tuner/Bypass	 Dual		
Tape 1 F.FWD	 Right		
Aux/Video	 Media		
Disc 2	 +  Shift + 2		
Disc 3 Eject	 +  Shift + 3		
Tape 1 Play	 Ok		
Eject	 Eject		
+10/Next Sv+V	 Guide		
Clear	 Exit		

