

 


 
 



 





 
 
 
 
 
 

 
 



 
 

 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Display	
Mute		Stop	
Every Pop		Tape 1 Hall/Ats	
Vol Rs-/Effect		CD Rewind	
Tape 1 Preset		Volume+	
Preset Pause		Volume-	
Tape 1 Stop		Mode	
Sleep		CD F.FWD	
Woofer/Speed		Pr 1	
Tape 2 Pre./eq		CD Pause	
CD Random		Pr 2	
Funct./Direct		Pr 3	
Repeat		Pr 4	
Vol Rs+/S.Mode		Pr 5	
CD/Theater		Pr 6	
Input/Source		Pr 7	
CD Play		Pr 8	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Tape 1 Rec	 Exit	Disc 1 Eject	 +  Shift + 1
Pr 9	 9	Disc 2	 +  Shift + 2
C.Reset/T.Alti+	 Green	Disc 3 Eject	 +  Shift + 3
Tape 1 Rew	 Left	Tape 2	 +  Shift + Down
Tune/Vol SW-	 Ch -		
Tune/Vol SW+	 Ch +		
Store/Center-	 Format		
Tape 2 REC./Jazz	 +  Shift + Exit		
Pr 0/10	 0		
Tape 1 F.FWD	 Right		
Tape 2	 +  Shift + Left		
Tape 1 Play	 Ok		
C.Clock/T.Bassi+	 Red		
Search/Center	 TV/R		
Tape 2	 +  Shift + Ok		
Tape 2 FF/AudioR	 +  Shift + Right		
Program	 +  Shift + Sleep		

