 





 
 


 

 



 
 

 
 





 




 
 

 
 



 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Info		Info
	P+		Ch +
	P-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Option		Options
	Smart Tv		Smart
	Guide		Guide
	Menu		Menu
	Back		Back
	Exit		Exit
	List		List
	@/Home		Shift + Smart
	FAV		Shift + Pre Ch
	Pre-CH		Pre Ch
	OO/Lang		Dual
	Subtitle		Subt
	Text		Text
	Red		Red
	Eco		3D

 

 
 
 
 




Originalfernbedienung    Ersatzfernbedienung

	Zoom-		Eject
	Zoom+		Format
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	OK		Ok
	Left		Left
	Stop		Stop
	Rec		Rec
	Play		Play
	>I		>>I
	I<		I<<
	>>		>>>
	<<		<<<

Originalfernbedienung    Ersatzfernbedienung

	Pause		Pause
	Sleep		Sleep
	Netflix		Media

