

 

 

 






 






 




Originalfernbedienung Ersatzfernbedienung

	Random		Smart
	Display		Info
	Prog/Direct		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Call		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Pitch-		Ch -
	Pitch+		Ch +

