




 



 



 











Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Power		Power
	CBL/SAT		0
	DVD		2
	Blu-ray		5
	GAME		Fav / Marker / PC
	AUX		7
	MEDIA PLAYER		Display / Media
	TV AUDIO		1
	8K		4
	TUNER		6
	USB		8
	CD		3
	Bluetooth		9
	Heos		Smart / List
	PHONO		AV / Input / RDS
	INTERNET		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	CH/Page+		CH+ / Page+
	ECO		Menu / Home
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Info		Info / Angle
	Option		Shift + Setup / OPT / Tools
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	I<< / Tune-		<< / Tune-
	I<< / Tune-		I<< / Preset-



RADIO





 

 












	Originalfernbedienung	Ersatzfernbedienung		Originalfernbedienung	Ersatzfernbedienung
		Play/Pause		Play / Slow	
		Play/Pause		Pause / Step / Freeze	
		>>I / Tune+		>>I / Preset+	
		>>I / Tune+		>> / Tune+	
		Smart Select 1	+	Shift + Red / Netflix /	
		Smart Select 2	+	Shift + Green / APP /	
		Smart Select 3	+	Shift + Yellow / YouTube /	
		Smart Select 4	+	Shift + Blue / Prime /	
		Sound Mode Movie / Green	/	Green / APP / Repeat	
		Sound Mode Music / Red	/	Red / Netflix / Search	
		Sound Mode Game / Blue	/	Blue / Prime Video / Random	
		Sound Mode Pure / Yellow	/	Yellow / YouTube / Repeat	












**Originalfernbedienung Ersatzfernbedienung**

	Sleep		Sleep / Timer
	Power		Power
	CBL/SAT		0
	DVD		2
	Blu-ray		5
	GAME		Fav / Marker / PC
	AUX		7
	MEDIA PLAYER		Display / Media
	TV AUDIO		1
	8K		4
	TUNER		6
	USB		8
	CD		3
	Bluetooth		9
	Heos		Smart / List
	PHONO		AV / Input / RDS
	INTERNET		Guide / EPG / -/--

**Originalfernbedienung Ersatzfernbedienung**

	CH/Page+		CH+ / Page+
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	I<< / Tune-		I<< / Preset-
	I<< / Tune-		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>I / Tune+		>> / Tune+
	>>I / Tune+		>>I / Preset+



RADIO

