




 


 
 

 


 
 














 


 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------|
|  | Power |  | Power |
|  | Open / Close |  | Exit |
|  | Disc |  | Shift + 1 |
|  | Dock |  | Shift + 2 |
|  | USB |  | Shift + 3 |
|  | Radio |  | Shift + 4 |
|  | Aux |  | Shift + 5 |
|  | Digital In |  | Shift + 6 |
|  | TV |  | Shift + 7 |
|  | MP3 Line-In |  | Shift + 8 |
|  | Disc Menu |  | D. Menu |
|  | Setup |  | Menu |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |

 


 






 
 

 

 
 
 


 


 

 
 




 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------|
|  | Back / Title |  | Back |
|  | Display |  | Info |
|  | Prev / REW |  | << |
|  | Prev / REW |  | l<< |
|  | Play / Pause |  | Play |
|  | Play / Pause |  | Pause |
|  | Next / FFW |  | >> |
|  | Next / FFW |  | >>l |
|  | Mute |  | Mute |
|  | Stop |  | Stop |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Ambisound |  | Smart |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|--------------|
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Select / Program |  | Pre Ch |
|  | Select / Program |  | Sleep |
|  | Repeat / Shuffle |  | Text |
|  | Audio Sync |  | Red |
|  | Bass / Treble |  | Green |
|  | Sound |  | Yellow |
|  | Sound |  +  | Shift + Dual |
|  | Subtitle |  | Subt |
|  | Angle |  | Format |
|  | Zoom |  | Eject |
|  | Audio |  | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|------|
|  | Audio |  | Blue |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

