






















 

















Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Language		Audio / Lang I/II
	SUBT / RIP		Subtitle / EQ
	Open / Close		Eject / Surround
	Zoom		Zoom / Size
	Time		Sleep / Timer
	TV / Radio		TV/Radio /
	Setup		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Title / TTX		Text / Goto
	Source		AV / Input / RDS
	Menu / PBC		Menu / Home
	Up		Up
	Left / Fav-		Left
	Enter		OK
	Right / Fav+		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	L/R		Smart / List
	Vol-		Vol-
	OSD		Display / Media
	1		1
	2		2
	3		3



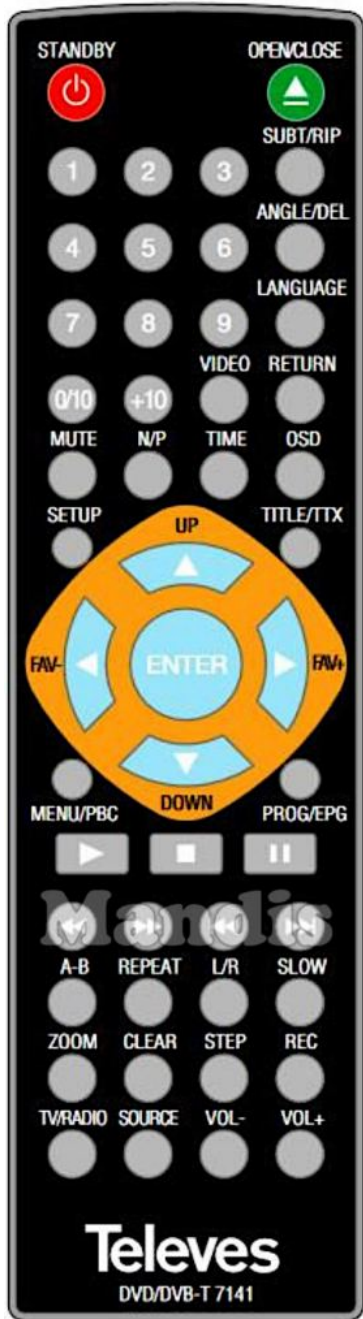 

Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	+10		Guide / EPG / -/--				
	0/10		0				
	Repeat		Green / APP / Repeat				
	A-B		Yellow / YouTube / Repeat				
	Slow		Shift + Play /				
	Step		Shift + Pause / Step /				
	Prog / EPG		Shift + TV/Radio / Program				
	Angle / Del		Shift + Back / Return				
	N/P		Shift + Display / Media				
	Video		Shift + 4				
	Prog / EPG		Shift + Guide / -/--				

