











**Originalfernbedienung    Ersatzfernbedienung**

	Operate Tv		Shift + Power
	PDC/VPS		Menu
	Transmit		Ok
	Tv/AV Tv		Shift + AV
	Volume+ Tv		Vol +
	Volume- Tv		Vol -
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -
	Operate		Power
	Display		Info
	I<< Index		I<<
	Index >>I		>>I
	Play		Play
	<<		<<
	>>		>>
	Stop		Stop
	Pause/Still		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	Still ADV		3D
	Rec		Rec
	Up		Ch +
	Down		Ch -
	Y+		Shift + Right
	Date+		Right
	On+		Up
	On-		Down
	Off+		Shift + Up
	Off-		Shift + Down
	Timer Rec		TV/R
	Check		Smart
	Showview		Media
	Recording		Blue
	AV Link		AV
	1		1
	2		2



