






 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/AV		AV
	TV / R		TV/R
	Menu		Menu
	Exit		Exit
	Up		Up

 
 
 




 






Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	FAV		Pre Ch
	EPG		Guide
	V +		Vol +
	V -		Vol -
	Audio		Info
	Info		Dual
	Zoom		Eject
	CH+/Page+		Ch +
	CH-/Page-		Ch -
	Red / SAT		Red
	Green / Text		Green
	Green / Text		Text
	Yellow / Sub		Yellow





Originalfernbedienung Ersatzfernbedienung

	Yellow / Sub		Subt
	Red / SAT		Smart
	Blue / <--PR		Blue
	Blue / <--PR		Back
	Pause		Pause
	<I		I<<
	I>		>>I
	Rec		Rec
	Play		Play
	<<		<<
	>>		>>
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

