

 

 
 

 

 

 

 

 
 
 

 
 

 
 
 

 
 


 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		1. ?	
Info		2abc	
Subt.List		3def	
TV		4ghi	
Text		5jkl	
Zoom		6mno	
TV/SAT		7pqrm	
Menu		8tuv	
Menu Up		9wxyz	
Display	 + 	Guide Pilote	
Menu Left		0/10	
OK Enter		Red	
Menu Right		Green	
Exit		Yellow	
Menu Down		Blue	
CH/Page+		Freeze	
CH/Page-		Dec/Pause	