


 
 
 



 

 
 
 
 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Rad		TV/R
	Subtitle		Subt
	AD/PIP/*		Dual
	TV/PC		Smart
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List


Originalfernbedienung Ersatzfernbedienung

	Q.View		D. Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Guide		Guide
	FAV		Pre Ch
	P+		Ch +
	P-		Ch -
	Text		Text
	Info		Info
	T.Opt		Options
	Settings		Shift + Options
	Q.Menu		Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	Simplink		Format
	Rec/*		Rec
	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow/Brightness		Yellow
	Blue/Brightness+		Blue

Originalfernbedienung Ersatzfernbedienung

