 
 







 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/VCR		TV/R
	AV		AV
	<<		<<
	>>		>>
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Up		Up
	PR/TRK+		Ch +
	PR/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Display/CLK/CN		3D
	i/Setup		Info
	Disc Menu		D. Menu
	Return		Back
	O)/Audio		Dual
	[...]/Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

ANGLE	Camera/Angle	A	Red
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
REC/ITR	Rec/ITR	REC MODE	Rec
LOCK	Lock	FAV PRE-CH	Pre Ch
TITLE	Title	-/-- GUIDE	Guide
PROGRAM	Program	PROG SLEEP	Sleep
MARKER	Marker	B	Green
SEARCH	Search	SHIFT + SEARCH TV/R	Shift + TV/R
CLEAR	Clear	CLEAR EXIT	Exit
REPEAT	Repeat	REPEAT TEXT	Text
A-B LP	A-B/LP	C	Yellow
RANDOM CM SKIP	Random/CM	D	Blue
SHOWVIEW	ShowView	APP MEDIA	Media
TV POWER	Power Tv	SHIFT + POWER	Shift + Power
*	*	SHIFT + ECO 3D	Shift + 3D
AV	AV Tv	SHIFT + TIMER AV	Shift + AV
PR+	PR+ Tv	SHIFT + + CH	Shift + Ch +


 
 

 






 


Originalfernbedienung Ersatzfernbedienung

PR- Tv	PR- Tv	SHIFT + CH -	Shift + Ch -
Vol+ Tv	Vol+ Tv	+ VOL	Vol +
Vol- Tv	Vol- Tv	VOL -	Vol -





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/VCR		TV/R
	AV		AV
	<<		<<
	>>		>>
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Display/CLK/CN		3D
	i/Setup		Info
	Disc Menu		D. Menu
	Return		Back
	Up		Up
	PR/TRK+		Ch +
	PR/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	O)/Audio		Dual
	[...]/Subtitle		Subt



