 
 

 

 
 
 
 
 

 

 
 
 


 
 

 
 
 

 
 
 
 
 
 
 

 
 
 


 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject / Tv/Radio		Eject
	Eject / Tv/Radio		TV/R
	Red/Goto		Red
	Green/Angle		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	FAV		Pre Ch
	Text		Text
	Freeze/Hold		List
	Sleep		D. Menu
	Subtitle		Subt
	Zoom/Size		Format
	Aspect		3D
	Subpage		Smart
	Media		Media
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	<<		<<
	>>		>>
	Rec / D.Setup		Rec
	Rec / D.Setup		Options
	Stop		Stop
	I<<		I<<
	>>I/Index		>>I
	Menu		Menu
	Title/Exit		Dual
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Source		Sleep
	EPG/D.Menu		Exit




Originalfernbedienung Ersatzfernbedienung

+ VOL	Vol+	+ VOL	Vol +
- VOL	Vol-	- VOL	Vol -
MUTE	Mute	MUTE	Mute
DISPLAY	Display	DISPLAY INFO	Info
+ CH	CH+	+ CH	Ch +
- CH	CH-	- CH	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
-/--	-/--	-/-- GUIDE	Guide




Originalfernbedienung Ersatzfernbedienung

↶	Back	RETURN BACK	Back
AUDIO LANG	Lang / Audio	TIMER AV	AV
P-MODE	P.Mode	SHIFT + PICTURE FORMAT	Shift + Format
S-MODE	S.Mode	SHIFT + SOUND DUAL	Shift + Dual



 
 
 
 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject / TV/Radio		Eject
	Eject / Tv/Radio		TV/R
	Red/Goto		Red
	Green/Angle		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	FAV		Pre Ch
	Text		Text
	Freeze/Hold		List
	Sleep		Sleep
	Subtitle		Subt
	Zoom/Size		Format
	Aspect		3D
	Subpage		Smart
	Media		Media
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	<<		<<
	>>		>>
	Rec		Rec
	D.Setup		Options
	Stop		Stop
	I<<		I<<
	>>I/Index		>>I
	Menu		Menu
	Title/Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Source		AV
	D.Menu / EPG		Shift + Guide

 
 


 
 


 





Originalfernbedienung Ersatzfernbedienung

	D.Menu / EPG		D. Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Display		Info
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	-/--		Guide
	Back		Back
	Lang/Audio		Dual
	P.Mode		Shift + Format
	S.Mode		Shift + Dual

