



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|--|---------------|
|  | Power |  | Power |
|  | Display |  | Info |
|  | N/P |  | Pre Ch |
|  | Open / Close |  | Eject |
|  | Language |  | Dual |
|  | Angle |  | Format |
|  | Subtitle |  | Subt |
|  | Prog |  | Sleep |
|  | Key b |  | Ch - |
|  | Key # |  | Ch + |
|  | Return |  | Back |
|  | View |  | 3D |
|  | Mute |  | Mute |
|  | PDVD |  | Smart |
|  | Time |  | AV |
|  | Zoom |  | Shift + Eject |
|  | Menu |  | Menu |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------------|
|  | Title |  | Media |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Setup |  | Options |
|  | PBC |  | Red |
|  | A/B |  | TV/R |
|  | Repeat |  | Text |
|  | L/R |  | Green |
|  | RAN |  | Yellow |
|  | Volume+ |  | Vol + |
|  | Volume- |  | Vol - |
|  | Step |  | Shift + Pause |
|  | Resume |  | Shift + Stop |
|  | 1 |  | 1 |



