
 

 

 
 

 
 






 
 







 
 
 

 






 

 

 

 

 


 

 
 
 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	UHF		Smart
	Pause		Pause
	EPG		Guide
	A-Z		Media
	FAV		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	TV/Radio		TV/R
	Menu		Menu
	Back		Back
	Exit		Exit
	Info		Info
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Red / FTA/CAS		Red
	Green / SAT		Green
	Yellow / TV/SAT		Yellow



