







 

 







 

 

 

 

 








 




 




 




 
 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Review		Smart / List
	Left/ <</-		Left
	Left/ <</-		<< / Preset-
	Right/ >>/+		Right
	Right/ >>/+		>> / Preset+
	Tv/VCR		AV / Input / RDS
	--:--		Exit / Cancel / Clear
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	X		Back / Return
	9		9
	0		0
	Timer		Sleep / Timer
	PR+		CH+ / Page+
	Start Debut +		Green / APP / Repeat
	Start Debut -		Red / Netflix / Search
	Stop Fin +		Blue / Prime Video / Random
	PR-		CH- / Page-
	Stop Fin -		Yellow / YouTube / Repeat
	Date-		Vol-
	Date+		Vol+
	Prog		TV/Radio /
	<<		<< / Tune-
	30 Sec/>>		Display / Media
	Timer/?		Shift + Sleep / Timer
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	'/"		Guide / EPG / -/--
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Menu		Menu / Home
	OK		OK
	Up		Up
	Down		Down
	Tv Vol-		Shift + Vol-
	Tv Vol+		Shift + Vol+
	Tv PR-		Shift + CH- /
	Tv PR+		Shift + CH+ /
	Tv/VCR Tv		Shift + AV / Input / RDS
	Power Tv		Shift + Power
	Mute Tv		Shift + Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

