


 


 
 


 


 




 


 



 

 
 


 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Clock / Timer		AV
	Cancel		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>≧10 / -/-		Guide
	Subtitle		Subt
	Audio		Dual

Originalfernbedienung Ersatzfernbedienung

	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Display		Info
	Angle		Format
	Return		Back
	DVD/CD		Red
	TAPE		Green
	EXT		Yellow
	TUNER		Blue
	Stop		Stop
	Pause / Rev. Play		Pause



