 



 



 






**Originalfernbedienung Ersatzfernbedienung**






 


 
 

 






 
 



 



 

 

 


	Power On		Power
	Power Off		Shift + Power
	Device On		Shift + Pre Ch
	Device Off		Shift + 0
	Quick Select		Red
	Quick Select 2 / (SAT/CBL)		Green
	Quick Select 3/(Dock)		Yellow
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source Select		AV
	Menu		Menu
	CH Level/Top		Shift + Menu
	Search/Setup		Options
	Return		Back

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	<</Band		<<
	Play		Play
	>>/Mode		>>
	I<</Tuning		I<<
	Pause		Pause
	Stop		Stop
	>>I/Tuning Up		>>I
	MulteQ		Dual
	DYN EQ		Media
	DYN Vol		Subt
	Restorer		Exit
	Standard		Text




**Originalfernbedienung    Ersatzfernbedienung**

	D/ST		Format
	Simulation		3D
	Input Mode		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10/Memory		Guide
	Shift/Link Menu		Pre Ch
	V.Sel		Rec
	Sleep		Sleep

**Originalfernbedienung    Ersatzfernbedienung**

	Power Tv		TV/R
	Input Tv		Shift + AV
	Tv		Shift + 1
	iPod		Shift + 2
	DVD		Shift + 3
	BD		Shift + 4
	Tuner		Shift + 5
	Dock		Shift + 6
	SAT TU		Shift + 7
	SAT/CBL		Shift + 8
	Game		Shift + 9
	V.AUX		Shift + Guide

