

 



 

 
 











 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	I-II		Dual
	Sleep		Sleep
	FAV		Pre Ch
	Tv/Radio		TV/R
	Mute		Mute
	Picture		Format
	Sound		Shift + Dual
	Source		AV
	Info		Info
	Exit		Exit
	Menu		Menu
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right


 
 


 

 





 
 




 

 










Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ATV/DTV/+10		Guide
	Back/Subtitle		Back
	[/≡]/TTX		Text
	Open/Close		Eject
	[≡x]/Aspect/Cancel		Media

 



 





Originalfernbedienung Ersatzfernbedienung

	Setup/DVD/CH.Lis		Options
	Vol+		Vol +
	[≡i]/Index		List
	Play/Pause		Play
	[≡♦]/Size		Shift + Format
	Title/EPG		Shift + Guide
	[≡?]/Slow/Reveal		D. Menu
	[≡o]/Repeat/Sub		Subt
	[≡+]/Goto/Hold		3D
	Stop		Stop
	A-B/Subtitle		Smart
	Red		Red
	Vol-		Vol -
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>		>>
	>>I		>>I

