
 



 
 

 
 
 

 
 
 




 
 







 









Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Epg	 + 	Shift + Guide	
Info	 + 	Shift + Info	
Subt.List		Subt	
Sleep Timer		Sleep	
TV		TV/R	
Video		D. Menu	
Text		Text	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
Audio		Dual	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	
9wxyz		9	
Guide Pilote		Guide	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
0/10			0
FAV Pref.			Pre Ch
Red			Red
Green			Green
Yellow			Yellow
Blue			Blue
West			I<<
Freeze			Stop
Lang./Rewind			<<
			Shift + Ch +
LNB F.Forward			>>
H/V Play			Play
East			>>I
			Shift + Ch -

