 


 

 

 

 

 

 



 



 



 









 

 









 





 




















 




 



 
 
 
 
 



 

 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power On	 Power	 Status	 Media
 Power Off	 Shift + Power	 Dimmer	 Mute
 Audio	 Dual	 V.Off	 Smart
 Subtitle	 Subt	 Random	 Blue
 Title	 List	 Zoom	 Shift + Eject
 Angle	 Red	 <I Slow	 Vol -
 Test	 Text	 <II Step	 Ch -
 Eject	 Eject	 Slow I>	 Vol +
 Info	 Info	 Step II>	 Ch +
 Pause	 Pause	 1	 1
 Up	 Up	 2	 2
 Left	 Left	 3	 3
 Enter	 Ok	 4	 4
 Right	 Right	 5	 5
 Down	 Down	 6	 6
 Setup	 Options	 7	 7
 Menu	 Menu	 8	 8





Originalfernbedienung   Ersatzfernbedienung

	9		9
	0		0
	Prog		Sleep
	Check		Pre Ch
	Clear		Exit
	Repeat		Shift + Text
	Repeat		Yellow
	A-B		Green
	Play		Play
	Previous		I<<
	Next		>>I
	<< Search		<<
	Search >>		>>
	Stop		Stop

Originalfernbedienung   Ersatzfernbedienung