



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio		Audio / Lang I/II
	VHS/DVD		Smart / List
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	Cancel / Reset		Exit / Cancel / Clear
	0		0
	-/-- / >=10		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	REW / << Slow/Search		<< / Tune-
	FF / Slow/Search		>> / Tune+
	Stop		Stop / Hold
	Pause / Slow		Pause / Step / Freeze
	Play		Play / Slow
	Direct Navigator / Top Menu		D.Menu / Top
	Up		Up
	Play List / Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Exit / Return		Back / Return





Originalfernbedienung Ersatzfernbedienung

	AV		AV / Input / RDS
	P.Memory		Fav / Marker / PC
	Play Mode		Eject / Surround
	Setup		Setup / OPT /
	Timer		Sleep / Timer
	Music with Picture		Sound / Title
	Rec Check		Rec / Rec Mode
	Group		Vol-
	A / Zoom		Zoom / Size
	B / Quick Replay		Picture / Format
	Dubbing		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	VHS/DVD Power		Power
	Audio		Audio / Lang I/II
	VHS/DVD		Smart / List
	1		1
	2		2
	3		3
	CH+ / Tracking/V-Lock+		CH+ / Page+
	4		4
	5		5
	6		6
	CH- / Tracking/V-Lock-		CH- / Page-
	7		7
	8		8
	9		9
	Input		AV / Input / RDS
	Cancel / Reset		Exit / Cancel / Clear
	0		0

Originalfernbedienung Ersatzfernbedienung

	-/-- / >=10		Guide / EPG / -/--
	ShowView		D.Menu / Top
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+
	REW		<< / Tune-
	FF		>> / Tune+
	Stop		Stop / Hold
	Pause / Slow		Pause / Step / Freeze
	Play		Play / Slow
	Prog Play		Text / Goto
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down





Originalfernbedienung Ersatzfernbedienung








 




	Exit / Return		Back / Return
	Prog/Check	+	Shift + TV/Radio / Program
	I-Timer	+	Shift + Sleep / Timer
	Off Timer		Subtitle / EQ
	Rec Mode	+	Shift + Rec / Rec Mode
	Timer		Sleep / Timer
	Music with Picture		Sound / Title
	Rec. Check		TV/Radio /
	Rec		Rec / Rec Mode
	Jet Rew	+	Shift + << /
	A / Ext Link		Red / Netflix / Search
	B / AV Link	+	Shift + AV / Input / RDS
	Dubbing		Eject / Surround

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Power		Power		
	AV		AV / Input / RDS		
	Volume+		Vol+		
	Volume-		Vol-		
	CH+		CH+ / Page+		
	CH-		CH- / Page-		

