













 





 

 









 













 

 


 
 















Originalfernbedienung Ersatzfernbedienung

	RDS ASPM		D.Menu / Top
	Direct		Info / Angle
	RDS PTY		Text / Goto
	On Screen		Smart / List
	RDS Display		Setup / OPT /
	Clear / Display		Display / Media
	Clear / Display		Exit / Cancel / Clear
	On / Stand By		Power
	1		1
	2		2
	3		3
	Clock / Timer		Sleep / Timer
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	+10		Guide / EPG / -/-
	Memory /		Mute / Dimmer
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	Up / Tuning+		Shift + Tune+ / >> /
	Up / Tuning+		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	>> / >> /		>> / Tune+
	I<< / << / Preset-		I<< / Preset-
	I<< / << / Preset-		<< / Tune-
	Down / Tuning-		Shift + Tune- / << /

Tune-



