



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV CH		Shift + Fav / Marker / PC
	0		0
	PRE CH		Fav / Marker / PC
	Info		Info / Angle
	Menu		Menu / Home
	Guide		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Tools		Setup / OPT /
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Internet		Smart / List
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Source		AV / Input / RDS
	P +		CH+ / Page+
	Vol-		Vol-





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P -		CH- / Page-
	TTX/MIX		Text / Goto
	Media P		Display / Media
	Content		D.Menu / Top
	CH LIST		Shift + Smart / List
	AD		Audio / Lang I/II
	SUBT		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

