




 
 
 
 





 

 




 

 














Originalfernbedienung Ersatzfernbedienung


 
 




 
 






PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
App		Media
Opt?		Options
TV		TV/R
Info	 + 	Shift + Info
Subt.List		Subt
Sleep Timer		Sleep
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung


 
 





 


 


 
 

OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Audio		Dual
Back		Back
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7



Originalfernbedienung Ersatzfernbedienung


 

 
 
 


 


 
 


 
 
 

8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Freeze		Stop
Blue		Blue
Dev		List
22Khz		3D
West		I<<
Radio		Shift + TV/R
On/Off		Shift + Power
Dec/Pause		Pause
		Shift + Mute

Originalfernbedienung Ersatzfernbedienung

 

 


 





 

 
 

 
+		Shift + Subt
Auth./DISEQC		Shift + Smart
Sys/Serv		Shift + Sleep
Home Cinema		Smart
Scan/Setup		Shift + Options
Interat		Shift + D. Menu
Pers.		Shift + Eject
Tune-		Shift + Left
East		>>I
H/V Play		Play
LNB F.Forward		>>
Lang./Rewind		<<
Alt/16:9		Format
Aft/Caf		Shift + Ok
Tune+		Shift + Right
		Shift + Exit
Browse		Shift + Back



Originalfernbedienung Ersatzfernbedienung




 
 




PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Subt.List		Subt
Opt?		Options
App		Media
Info	 + 	Shift + Info
Sleep Timer		Sleep
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung









 






 
 
 
 
 


 

 
 
OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Audio		Dual
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7



Originalfernbedienung Ersatzfernbedienung






 
 

 



 


 
 

8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
On/Off	 + 	Shift + Power
Scan/Setup	 + 	Shift + Options
Radio	 + 	Shift + TV/R
	 + 	Shift + Mute
22Khz		List
+	 + 	Shift + Subt
Sys/Serv	 + 	Shift + Sleep
Pers.	 + 	Shift + Eject

Originalfernbedienung Ersatzfernbedienung









 



 


 

SAT Sky	 + 	Shift + AV
Navi Mode	 + 	Shift + Menu
Browse	 + 	Shift + Media
Search	 + 	Shift + Up
Auth./DISEQC		3D
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
East		>>
	 + 	Shift + Exit
Lang./Rewind		<<
H/V Play		Play
Store	 + 	Shift + Down
Alt/16:9		Format
	 + 	Shift + Vol +
Home Cinema		Smart
	 + 	Shift + Vol -



 
 



 
Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute
Opt?		Options
Info	 + 	Shift + Info
Subt.List		Subt
Sleep Timer		Sleep
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right

Originalfernbedienung Ersatzfernbedienung





 
 
 

 





 

 


Exit		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
CH/Page+		Ch +
Audio		Dual
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9





 

 












Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Guide Pilote			Guide
0/10			0
FAV Pref.			Pre Ch
Red			Red
Green			Green
Dec/Pause			Pause
Lang./Rewind			<<
Freeze			Stop
LNB F.Forward			>>
H/V Play			Play
East			>>
Yellow			Yellow
Blue			Blue



Originalfernbedienung Ersatzfernbedienung


PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Subt.List		Subt
Opt?		Options
App		Media
Info	 + 	Shift + Info
Sleep Timer		Sleep
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung



OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Audio		Dual
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7



Originalfernbedienung Ersatzfernbedienung

8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
On/Off	 + 	Shift + Power
Scan/Setup	 + 	Shift + Options
	 + 	Shift + Mute
Dec/Pause		Pause
+	 + 	Shift + Subt
Sys/Serv	 + 	Shift + Sleep
Interat	 + 	Shift + D. Menu
SAT Sky	 + 	Shift + AV

Originalfernbedienung Ersatzfernbedienung

22Khz		List
Radio	 + 	Shift + TV/R
Navi Mode	 + 	Shift + Menu
Search	 + 	Shift + Up
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
	 + 	Shift + Exit
Store	 + 	Shift + Down
	 + 	Shift + Vol +
	 + 	Shift + Ch +
	 + 	Shift + Vol -
Home Cinema		Smart
	 + 	Shift + Ch -
De-emph	 + 	Shift + 1
Swap	 + 	Shift + 2
P.lock	 + 	Shift + 3
Wn	 + 	Shift + 4



