



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red/Repeat		Red
	Green/Prog		Green
	Yellow/Slow		Yellow
	Blue/Angle		Blue
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Goto/Fav		Pre Ch
	Eject		Eject
	I<<		I<<
	>>I		>>I
	Setup		Options
	Vcr		Format

Originalfernbedienung Ersatzfernbedienung

	TV/Radio		TV/R
	Recall		Back
	Menu		Menu
	Text		Text
	Exit		Exit
	Guide		Guide
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok/Ch List		Ok
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Zoom		Shift + Eject
	Ch+		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
CH -	Ch-	CH -	Ch -				
1	1	1	1				
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
AUDIO	Audio	SOUND DUAL	Dual				
SUBTITLE	Subtitle	AD SUBT	Subt				

