


 

 
 
 
 

 

 
 
 
 
 
 
 
 


 
 
 

 
 
 
 
 
 

 

 



 





Originalfernbedienung Ersatzfernbedienung




 


 
 

 

 





 
 

 

 

 
 

 
|   |              |   |       |
|---|--------------|---|-------|
|    | Power        |    | Power |
|    | Open / Close |    | Eject |
|    | HDMI         |    | Red   |
|    | Input Select |    | AV    |
|    | Prog. +      |    | Ch +  |
|    | Prog. -      |    | Ch -  |
|    | 1            |    | 1     |
|    | 2            |    | 2     |
|    | 3            |    | 3     |
|    | 4            |    | 4     |
|   | 5            |   | 5     |
|  | 6            |  | 6     |
|  | 7            |  | 7     |
|  | 8            |  | 8     |
|  | 9            |  | 9     |
|  | 0            |  | 0     |
|  | Clear        |  | Exit  |

Originalfernbedienung Ersatzfernbedienung

|   |                  |   |               |
|---|------------------|---|---------------|
|    | Zoom             |    | Shift + Eject |
|    | Audio            |    | Dual          |
|    | Repeat           |    | Text          |
|    | Disc Menu        |    | D. Menu       |
|    | Top Menu         |    | Menu          |
|    | Up               |    | Up            |
|    | Left             |    | Left          |
|    | Enter            |    | Ok            |
|    | Right            |    | Right         |
|    | Down             |    | Down          |
|   | Display          |   | Info          |
|  | Return           |  | Back          |
|  | Variable Replay  |  | Smart         |
|  | Variable Skip    |  | Shift + Smart |
|  | 1.3x / 0.8x Play |  | Shift + Play  |
|  | Time Slip        |  | Pre Ch        |
|  | <<               |  | <<            |





| Originalfernbedienung   | Ersatzfernbedienung | Originalfernbedienung   | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|    | Play                |    | Play                |
|    | >>                  |    | >>                  |
|    | Skip l<<            |    | l<<                 |
|    | Stop                |    | Stop                |
|    | Skip >>l            |    | >>l                 |
|    | Pause               |    | Pause               |
|    | HDD                 |    | Yellow              |
|    | DVD                 |    | Green               |
|    | Dubbing             |    | Subt                |
|    | Rec Mode            |  +  | Shift + Rec         |
|    | Rec                 |    | Rec                 |
|    | SAT Link            |    | Media               |
|   | Timer Prog          |   | Sleep               |
|  | Setup               |    | Options             |
|   |                     |   |                     |
|   |                     |   |                     |
|   |                     |   |                     |

