









 







Originalfernbedienung Ersatzfernbedienung

|   |                |   |                       |
|---|----------------|---|-----------------------|
|    | Power Receiver |    | Power                 |
|    | Mute           |    | Mute / Dimmer         |
|    | Play           |    | Play / Slow           |
|    | Pause          |    | Pause / Step / Freeze |
|    | Stop           |    | Stop / Hold           |
|    | <<             |    | << / Tune-            |
|    | >>             |    | >> / Tune+            |
|    | I<<            |    | I<< / Preset-         |
|    | >>I            |    | >>I / Preset+         |
|    | Adv. Surr.     |    | Sound / Title         |
|   | Audio          |   | Audio / Lang I/II     |
|  | iPod CTRL      |  | Eject / Surround      |
|  | A.ATT.         |  | Picture / Format      |
|  | HMG            |  | Zoom / Size           |
|  | Sleep          |  | Sleep / Timer         |
|  | TV             |  | TV/Radio /            |
|  | Top Menu       |  | D.Menu / Top          |











 



 









 
 
 
 






Originalfernbedienung Ersatzfernbedienung

|   |                |   |                       |
|---|----------------|---|-----------------------|
|    | DVR / BDR      |    | Setup / OPT /         |
|    | MCACC          |    | Text / Goto           |
|    | ↻ Input Select |    | AV / Input / RDS      |
|    | Home Menu      |    | Menu / Home           |
|    | Up             |    | Up                    |
|    | D.Access       |    | Info / Angle          |
|    | Left           |    | Left                  |
|    | Enter          |    | OK                    |
|    | Right          |    | Right                 |
|    | T.Edit         |    | Exit / Cancel / Clear |
|   | Down           |   | Down                  |
|  | Return         |  | Back / Return         |
|  | Master Volume  |  | Vol+                  |
|  | Signal Sel     |  | Smart / List          |
|  | CH Level       |  | CH+ / Page+           |
|  | Master Volume  |  | Vol-                  |
|  | Disp           |  | Display / Media       |

 







 














 




 







Originalfernbedienung Ersatzfernbedienung

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | 2nd Return    |    | CH- / Page-                 |
|    | 1             |    | 1                           |
|    | 2             |    | 2                           |
|    | 3             |    | 3                           |
|    | 4             |    | 4                           |
|    | 5             |    | 5                           |
|    | 6             |    | 6                           |
|    | 7             |    | 7                           |
|    | 8             |    | 8                           |
|    | 9             |    | 9                           |
|  | Video         |  | Guide / EPG / -/--          |
|  | 0             |  | 0                           |
|  | BD            |  | Fav / Marker / PC           |
|  | Class         |  | Red / Netflix / Search      |
|  | Repeat        |  | Green / APP / Repeat        |
|  | Enter (Class) |  | Yellow / YouTube / Repeat   |
|  | Random        |  | Blue / Prime Video / Random |

Originalfernbedienung Ersatzfernbedienung




















|   |                     |   |                             |
|---|---------------------|---|-----------------------------|
|    | Dimmer              |    | Shift + Mute / Dimmer       |
|    | Tune-               |    | Shift + << /                |
|    | Tune+               |    | Shift + >> /                |
|    | Preset -            |    | Shift + I<< / Preset-       |
|    | Preset +            |    | Shift + >>I / Preset+       |
|    | Band                |    | Shift + Sound / Title       |
|    | Stereo              |    | Shift + Audio / Lang I/II   |
|    | Auto / Alc / Direct |    | Shift + Picture / Format    |
|    | ADPT                |    | Shift + TV/Radio / Program  |
|    | MPX                 |    | Shift + D.Menu / Top Menu   |
|  | Status              |  | Shift + Setup / OPT / Tools |
|  | Phase CTRL          |  | Shift + Text /              |
|  | Input Select ~      |  | Shift + AV / Input / RDS    |
|  | Standard            |  | Shift + Menu /              |
|  | 2nd Up              |  | Shift + Up                  |
|  | 2nd Left            |  | Shift + Left                |
|  | 2nd Enter           |  | Shift + OK                  |







Originalfernbedienung Ersatzfernbedienung

|   |           |   |   |   |                         |
|---|-----------|---|---|---|-------------------------|
|  | 2nd Right |  | + |  | Shift + Right           |
|  | 2nd Down  |  | + |  | Shift + Down            |
|  | PQLS      |  | + |  | Shift + Smart / List    |
|  | 2nd Disp. |  | + |  | Shift + Display / Media |
|  | DVD       |  | + |  | Shift + 2               |
|  | CD        |  | + |  | Shift + 3               |
|  | Video     |  | + |  | Shift + 4               |
|  | Tuner     |  | + |  | Shift + 6               |
|  | iPod USB  |  | + |  | Shift + 8               |
|  | HDMI      |  | + |  | Shift + 0               |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |
|   |           |   |   |   |                         |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |  |  |
|--|--|--|--|--|--|
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |
|  |  |  |  |  |  |

