


 

 





 



 








 



 



 













Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	BD		Yellow / YouTube / Repeat
	DVD		2
	DVR / BDR		AV / Input / RDS
	HDMI		0
	TV/SAT		TV/Radio /
	CD		3
	HMG		Shift + AV / Input / RDS
	ADPT		Eject / Surround
	iPod USB		Shift + 8
	Tuner		6
	Video		4
	↶ Input Select		Shift + Left
	Input Select ↷		Shift + Right
	Master Volume		Vol+
	Master Volume		Vol-
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Top Menu		D.Menu / Top
	Band		Subtitle / EQ
	Audio		Audio / Lang I/II
	Tune+		Shift + >> /
	Up		Up
	Tools		Setup / OPT /
	T.Edit		Text / Goto
	Video		Picture / Format
	Left		Left
	Preset -		Shift + I<< / Preset-
	Enter		OK
	Preset +		Shift + >>I / Preset+
	Right		Right
	iPod CTRL		Smart / List
	Home Menu		Menu / Home
	Tune-		Shift + << /
	Down		Down























 






 
 















 
 

 




 
 







Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	<<		<< / Tune-
	Phase CTRL		Red / Netflix / Search
	Play		Play / Slow
	>>		>> / Tune+
	Status		Exit / Cancel / Clear
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	MPX		Zoom / Size
	PQLS		Shift +
	Stop		Menu /
	Stop		Stop / Hold
	>>I		>>I / Preset+
	1 Tuner		1
	S.Retriever		Shift +
	2 Tuner		Text /
			Shift +
			2

Originalfernbedienung Ersatzfernbedienung

	3 Tuner		Shift +
			3
	Audio DVD		Shift +
			Audio /
	4 Tuner		Shift +
			4
	Signal Sel		Shift +
			Setup /
	MCACC		Shift +
			Blue /
	5 Tuner		Shift +
			5
	6 Tuner		Shift +
			6
	Sleep		Sleep /
			Timer
	Disp		Display /
			Media
	7 Tuner		7
	CH Level		Shift +
			CH+ /
	8 Tuner		8
	A.ATT.		Shift +
			Yellow /
	9 Tuner		Shift +
			9
	Dimmer		Shift +
			Mute /
	CH +		Shift +
			CH+ /
	D.Access		Shift +
			D.Menu /
			Top Menu





Originalfernbedienung Ersatzfernbedienung

	0 Tuner	+	Shift + 0
	Class	+	Shift + Display / Media
	Enter (Class)	+	Shift + OK
	CH -		CH- / Page-
	Auto / Alc / Direct		Info / Angle
	Stereo		Sound / Title
	Standard	+	Shift + Smart / List
	Adv. Surr.	+	Shift + Green / APP /

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power Source		Power
	DVD		Shift + 2
	Top Menu		D.Menu / Top
	Up		Up
	Left		Left
	Enter		Shift + OK
	Enter		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold



 


















 





 





 

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	1		1
	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



 





Originalfernbedienung Ersatzfernbedienung

	Power Source		Power
	Tuner	 + 	Shift + 6
	Master Volume		Vol+
	Master Volume		Vol-
	Mute		Mute / Dimmer
	Band		Subtitle / EQ
	Tune+		>> / Tune+
	T.Edit		Text / Goto
	Preset-		I<< / Preset-
	Enter		OK
	Preset+		>>I / Preset+
	Search		Red / Netflix / Search
	Tune-		<< / Tune-
	Menu		Menu / Home
	MPX		Zoom / Size
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	Disp		Display / Media
	7		7
	8		8
	9		9
	D.Access		D.Menu / Top
	0		0
	Class	 + 	Shift + Display / Media

