





 

 

 

 
 





 







 
 

 







Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Sleep		Sleep / Timer
	INPUT PREV.		CH- / Page-
	INPUT NEXT		CH+ / Page+
	NETWORK		Shift + 7
	iPod / USB		Shift + 8
	ADAPTER		Shift + 4
	BD		Shift + 9
	DVD		Shift + 2
	DVR / BDR		Shift + 5
	SAT / CBL		Shift + Fav / Marker / PC
	GAME		Shift + Guide / EPG / -/-
	HDMI		Shift + 0
	CD		Shift + 3
	TV		Shift + 1
	TUNER		Shift + 6
	Auto / Direct		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	ALC /		Green / APP / Repeat
	Adv. Surr.		Yellow / YouTube / Repeat
	ECO		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	Up		Up
	Tune+		Shift + >> /
	Tools Menu		Setup / OPT /
	Volume+		Vol+
	Left		Left
	Preset -		Shift + I<< / Preset-
	Enter		OK
	Right		Right
	Preset+		Shift + >>I / Preset+
	Down		Down
	Tune-		Shift + <<I /
	Volume-		Vol-
	Home Menu		Menu / Home


















 

















Originalfernbedienung Ersatzfernbedienung

	iPod Ctrl.		D.Menu / Top
	PTY		Info / Angle
	Return		Back / Return
	BAND		TV/Radio /
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	BASS DOWN		Shift + Down
	>>I		>>I / Preset+
	BASS UP		Shift + Up
	<<		<< / Tune-
	TREBLE DOWN		Shift + Left
	>>		>> / Tune+
	TREBLE UP		Shift + Right
	1		1

Originalfernbedienung Ersatzfernbedienung

	PHASE		Subtitle / EQ
	2		2
	3		3
	Signal Sel.		Guide / EPG / -/-
	DISP		Display / Media
	4		4
	Auto S.RTRV		Sound / Title
	5		5
	SB CH		Eject / Surround
	6		6
	CHANNEL		Smart / List
	Repeat		Shift + Green / APP /
	7		7
	Midnight		Picture / Format
	Speakers		Zoom / Size
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	CHANNEL LEVEL	SHIFT + CH PAGE	Shift + CH+ /
	Shuffle	SHIFT + Prime Video RANDOM	Shift + Blue / Prime
	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
	0	HDMI - BAT 0	0
	+ Favorite	PC FAV MARKER	Fav / Marker / PC
	CHANNEL LEVEL	SHIFT + CH PAGE	Shift + CH- /

Originalfernbedienung Ersatzfernbedienung

