



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	Band		Red
	DVD		Green
	AUX		Yellow
	USB		Blue
	Sleep		Sleep
	Dimmer		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	0		0
	Return		Back
	XTS Pro		Media
	Marker		Format
	Search		TV/R
	O)))/Audio		Dual
	Sound		Shift + Dual
	[...]/Subtitle		Subt
	VSM		Smart
	Setup		Options
	Display		Info
	Up		Up
	Preset+		Ch +
	Down		Down
	Preset-		Ch -
	Right/Tun.+		Right
	Left/Tun-		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Menu		Menu
	Title		List
	<</Scan-		<<
	>>/Scan+		>>
	Play		Play
	I<</Skip-		I<<
	>>I/Skip+		>>I
	Pause/Step		Pause
	Stop		Stop
	Repeat		Text
	Repeat A-B	+	Shift + Text
	Vol+		Vol +
	Vol-		Vol -
	Prog/Memo	+	Shift + Sleep
	Clear		Exit
	Zoom	+	Shift + Eject

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	RDS		AV

