


 



 

 







 









 

 

 



 





 

 




 

 

 

 

 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	Time/Text		Text
	Picture Mode		Format
	Audio		Dual

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Angle		Red
	Sur		Options
	Search Mode		AV
	Repeat		Shift + Text
	A-B		Shift + Play
	Shuffle		Yellow
	SA-CD		Smart
	Album+		Ch +
	Album-		Ch -
	Zoom		Shift + Eject
	Picture Navi		TV/R
	>>		>>
	<<		<<
	Scan >>/Slow		>>
	<< Scan/<I		<<
	←-/Instant Replay/<I Step		Shift + I<<



