


Originalfernbedienung Ersatzfernbedienung

	On / Off		Power
	Mute All		Shift + Mute / Dimmer
	Mute		Mute / Dimmer
	Stored		Smart / List
	CD - DVD		Shift + 2
	FM - AM		Shift + TV/Radio / Program
	AUX		Shift + 7
	TV		TV/Radio /
	CBL - SAT		Eject / Surround
	VCR		Shift + 4
	Library		Shift + Display / Media
	Up / Tune +		Up
	DVD Menu		D.Menu / Top
	Settings		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	System		Text / Goto
	Down / Tune -		Down
	Exit		Exit / Cancel / Clear
	Track/Chap./CH +		CH+ / Page+
	Volume +		Vol+
	Track/Chap./CH -		CH- / Page-
	Volume -		Vol-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<< Seek		I<< / Preset-
	>>I Seek		>>I / Preset+
	Shuffle		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	1		1
	2		2



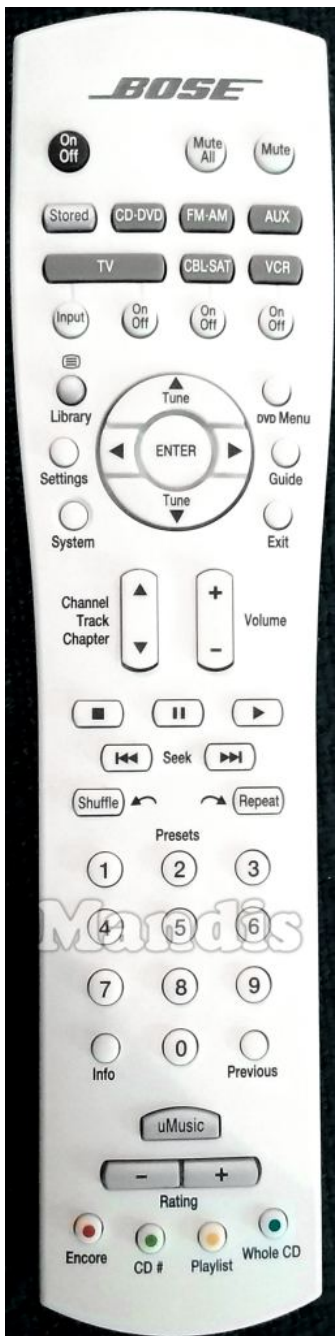

Originalfernbedienung Ersatzfernbedienung

3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
Info	Info	ANGLE	Info / Angle
0	0	HDMI - BAT	0
Previous	Previous	RETURN	Back / Return
uMusic	uMusic	SHIFT + LIST	Shift + Smart / List
Rating-	Rating-	SHIFT +	Shift + Down
Rating+	Rating+	SHIFT +	Shift + Up
Encore	Encore	HOME	Menu / Home
CD #	CD #	PC FAV MARKER	Fav / Marker / PC
Playlist	Playlist	MEDIA	Display / Media
Whole CD	Whole CD	SHIFT + CD - STB	Shift + 3

Originalfernbedienung Ersatzfernbedienung

