


Originalfernbedienung Ersatzfernbedienung

	On / Off		Power
	Mute All		Shift + Mute / Dimmer
	Mute		Mute / Dimmer
	Stored		Smart / List
	CD - DVD		Shift + 2
	FM - AM		Shift + TV/Radio / Program
	AUX		Shift + 7
	TV		TV/Radio /
	CBL - SAT		Eject / Surround
	VCR		Shift + 4
	Library		Shift + Display / Media
	Up / Tune +		Up
	DVD Menu		D.Menu / Top
	Settings		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	System		Text / Goto
	Down / Tune -		Down
	Exit		Exit / Cancel / Clear
	Track/Chap./CH +		CH+ / Page+
	Volume +		Vol+
	Track/Chap./CH -		CH- / Page-
	Volume -		Vol-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<< Seek		I<< / Preset-
	>>I Seek		>>I / Preset+
	Shuffle		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	1		1
	2		2



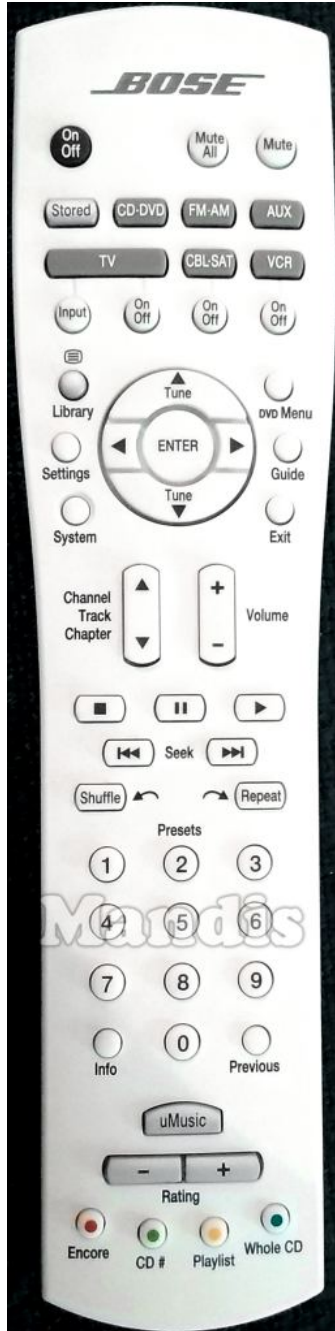

Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
3	3	CD - STB	3				
4	4	VIDEO	4				
5	5	TAPE	5				
6	6	TUNER	6				
7	7	AUX - HDD	7				
8	8	USB	8				
9	9	BLUETOOTH	9				
Info	Info	ANGLE	Info / Angle				
0	0	HDMI - SAT	0				
Previous	Previous	RETURN	Back / Return				
uMusic	uMusic	SHIFT + LIST	Smart / List				
Rating-	Rating-	SHIFT + [Down Arrow]	Shift + Down				
Rating+	Rating+	SHIFT + [Up Arrow]	Shift + Up				
Encore	Encore	HOME	Menu / Home				
CD #	CD #	PC FAV MARKER	Fav / Marker / PC				
Playlist	Playlist	MEDIA	Display / Media				
Whole CD	Whole CD	SHIFT + CD - STB	Shift + 3				

