
 
 




Originalfernbedienung Ersatzfernbedienung

 
 

 



 

 


 

	On / Off		Power
	Mute All		Shift + Mute
	Mute		Mute
	Stored		List
	CD - DVD		Shift + 1
	FM - AM		Shift + 2
	TV		Shift + 3
	CBL - SAT		Shift + 4
	AUX		Shift + 5
	VCR		Shift + 6
	Up / Tune +		Up
	Library		Text
	Down / Tune -		Down
	Left		Left
	Right		Right
	Enter		Ok
	Settings		Options

Originalfernbedienung Ersatzfernbedienung

	System		Menu
	DVD Menu		D. Menu
	Guide		Guide
	Exit		Exit
	Volume +		Vol +
	Volume -		Vol -
	Track/Chap./CH +		Ch +
	Track/Chap./CH -		Ch -
	Stop		Stop
	Pause		Pause
	Play		Play
	I<< Seek		I<<
	>>I Seek		>>I
	Shuffle		Smart
	Repeat		Media
	1		1
	2		2





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Info		Info				
	Last		Pre Ch				
	uMusic		Dual				
	Rating-		<<				
	Rating+		>>				
	Encore		Red				
	CD #		Green				
	Playlist		Yellow				
	Whole CD		Blue				

 


 




**Originalfernbedienung Ersatzfernbedienung**

	On / Off		Power
	Mute All		Shift + Mute
	Mute		Mute
	Stored		List
	CD - DVD		Shift + 1
	FM - AM		Shift + 2
	TV		Shift + 3
	CBL - SAT		Shift + 4
	AUX		Shift + 5
	VCR		Shift + 6
	Up / Tune +		Up
	Library		Text
	Down / Tune -		Down
	Left		Left
	Right		Right
	Enter		Ok
	Settings		Options

**Originalfernbedienung Ersatzfernbedienung**

	System		Menu
	DVD Menu		D. Menu
	Guide		Guide
	Exit		Exit
	Volume +		Vol +
	Volume -		Vol -
	Track/Chap./CH +		Ch +
	Track/Chap./CH -		Ch -
	Stop		Stop
	Pause		Pause
	Play		Play
	I<< Seek		I<<
	>>I Seek		>>I
	Shuffle		Smart
	Repeat		Media
	1		1
	2		2





**Originalfernbedienung Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Last		Pre Ch
	uMusic		Dual
	Rating-		<<
	Rating+		>>
	Encore		Red
	CD #		Green
	Playlist		Yellow
	Whole CD		Blue

**Originalfernbedienung Ersatzfernbedienung**