
 
 
 





 

 
 
 

 
 
 

 

 



 
 
 






**Originalfernbedienung    Ersatzfernbedienung**

	POWER		Power
	MUTE		Mute
	MENU		Menu
	ESC		Back
	MY BUTTON 1		1
	MY BUTTON 2		2
	UP		Up
	DOWN		Down
	KEystone		3D
	MY SOURCE / D.		AV
	LEFT		Left
	SEARCH		TV/R
	BLANK		Subt
	RIGHT		Right
	ASPECT		Format
	VOL+		Vol +
	VOL-		Vol -

**Originalfernbedienung    Ersatzfernbedienung**

	PAGE UP		Ch +
	PAGE DOWN		Ch -
	MAGNIFY ON		Smart
	MAGNIFY OFF		Media
	ENTER		Ok
	RESET		Exit
	FREEZE		Pause
	POSITION		List
	AUTO		Dual
	VIDEO		Red
	COMPUTER		Green

