
 



 
 
 






 





 

 









 



**Originalfernbedienung Ersatzfernbedienung**

|   |              |   |               |
|---|--------------|---|---------------|
|    | On           |    | Power         |
|    | Off          |  +      | Shift + Power |
|    | Mute         |    | Mute          |
|    | AVR          |  +      | Shift + 1     |
|    | DVD          |  +      | Shift + 2     |
|    | CD           |  +      | Shift + 3     |
|    | Tape         |  +      | Shift + 4     |
|    | VID1/VCR     |  +      | Shift + 5     |
|    | VID2/TV      |  +      | Shift + 6     |
|    | VID3/CBL/SAT |  +      | Shift + 7     |
|   | VID4         |  +    | Shift + 8     |
|  | AM/FM        |  +  | Shift + 9     |
|  | 6/8 CH       |  +  | Shift + Guide |
|  | Sleep        |    | Sleep         |
|  | Test         |    | Text          |
|  | Surr.        |    | Dual          |
|  | Night        |    | List          |

**Originalfernbedienung Ersatzfernbedienung**

|   |              |   |         |
|---|--------------|---|---------|
|    | M-Room       |    | D. Menu |
|    | Vol+         |    | Vol +   |
|    | Vol-         |    | Vol -   |
|    | CH./[≡?]     |    | TV/R    |
|    | SPKR/Menu    |    | Menu    |
|    | Up           |    | Up      |
|    | Left         |    | Left    |
|    | Set          |    | Ok      |
|    | Right        |    | Right   |
|    | Down         |    | Down    |
|   | Digital/[≡X] |   | Subt    |
|  | Delay/Normal |  | Pre Ch  |
|  | 1            |  | 1       |
|  | 2            |  | 2       |
|  | 3            |  | 3       |
|  | 4            |  | 4       |
|  | 5            |  | 5       |





Originalfernbedienung Ersatzfernbedienung

|  |            |  |              |
|--|------------|--|--------------|
|  | 6          |  | 6            |
|  | 7          |  | 7            |
|  | 8          |  | 8            |
|  | 9          |  | 9            |
|  | 0          |  | 0            |
|  | Tun-M/[≡+] |  | Smart        |
|  | Mem/[≡◆]   |  | Media        |
|  | Tuning ▲   |  | Ch +         |
|  | Tuning ▼   |  | Ch -         |
|  | Direct     |  | Guide        |
|  | Clear      |  | Exit         |
|  | OSD        |  | Info         |
|  | RDS        |  | Options      |
|  | Preset ▲   |  | Shift + Ch + |
|  | Preset ▼   |  | Shift + Ch - |
|  | Dolby      |  | Red          |
|  | DTS Surr.  |  | Green        |

Originalfernbedienung Ersatzfernbedienung



 
 


 

 

 








 
 
|  |               |  |             |
|--|---------------|--|-------------|
|  | DTS Neo 6     |  | Yellow      |
|  | Logic 7       |  | Blue        |
|  | Stereo        |  | Shift + Red |
|  | I<</Skip Down |  | I<<         |
|  | Skip Up/>>I   |  | >>I         |
|  | << DVD        |  | <<          |
|  | Play DVD      |  | Play        |
|  | >> DVD        |  | >>          |
|  | Stop DVD      |  | Stop        |
|  | Pause DVD     |  | Pause       |







**Originalfernbedienung    Ersatzfernbedienung**

|   |              |   |               |
|---|--------------|---|---------------|
|    | Power On     |    | Power         |
|    | Power Off    |    | Shift + Power |
|    | Night        |    | Exit          |
|    | M-Room       |    | Text          |
|    | Vol+         |    | Vol +         |
|    | Vol-         |    | Vol -         |
|    | SPKR/Menu    |    | Menu          |
|    | CH./[≡?]     |    | TV/R          |
|    | Digital/[≡X] |    | Media         |
|    | Delay/Normal |    | Info          |
|    | Up           |    | Up            |
|  | Down         |  | Down          |
|  | Right        |  | Right         |
|  | Left         |  | Left          |
|  | Set          |  | Ok            |
|  | 1            |  | 1             |
|  | 2            |  | 2             |

**Originalfernbedienung    Ersatzfernbedienung**

|   |            |   |              |
|---|------------|---|--------------|
|    | 3          |    | 3            |
|    | 4          |    | 4            |
|    | 5          |    | 5            |
|    | 6          |    | 6            |
|    | 7          |    | 7            |
|    | 8          |    | 8            |
|    | 9          |    | 9            |
|    | 0          |    | 0            |
|    | Tun-M/[≡+] |    | Guide        |
|    | Mem/[≡◇]   |    | Pre Ch       |
|    | Direct     |    | Smart        |
|  | Clear      |  | Shift + Exit |
|  | Preset ▲   |  | Ch +         |
|  | Preset ▼   |  | Ch -         |
|  | RDS/D.Skip |  | Options      |
|  | >>         |  | >>           |
|  | <<         |  | <<           |









**Originalfernbedienung Ersatzfernbedienung**

|   |              |   |               |
|---|--------------|---|---------------|
|    | Power On     |    | Power         |
|    | Power Off    |    | Shift + Power |
|    | SPKR/Menu    |    | Menu          |
|    | Delay/Normal |    | Info          |
|    | 1            |    | 1             |
|    | 2            |    | 2             |
|    | 3            |    | 3             |
|    | 4            |    | 4             |
|    | 5            |    | 5             |
|    | 6            |    | 6             |
|  | 7            |  | 7             |
|  | 8            |  | 8             |
|  | 9            |  | 9             |
|  | 0            |  | 0             |
|  | Tun-M/[≡+]   |  | Guide         |
|  | Mem/[≡◆]     |  | Pre Ch        |
|  | Direct       |  | Smart         |

**Originalfernbedienung Ersatzfernbedienung**

|   |                 |   |              |
|---|-----------------|---|--------------|
|    | Preset ▲/Blue   |    | Ch +         |
|    | RDS/D.Skip      |    | Options      |
|    | >>              |    | >>           |
|    | <<              |    | <<           |
|    | Play            |    | Play         |
|    | Stop            |    | Stop         |
|    | Pause           |    | Pause        |
|    | >>              |    | >>           |
|    | <<              |    | <<           |
|    | Power (On /Off) |    | Media        |
|  | PR+ VCR         |  | Shift + Ch + |
|  | PR- VCR         |  | Ch -         |
|  | Vol+ VCR        |  | Vol +        |
|  | Vol- VCR        |  | Vol -        |
|  | 1 VCR           |  | Shift + 1    |
|  | 2 VCR           |  | Shift + 2    |
|  | 3 VCR           |  | Shift + 3    |







