













 




 





Originalfernbedienung Ersatzfernbedienung

	Off		Shift + Power
	On		Power
	Mute		Mute / Dimmer
	AVR		Smart / List
	DVD		Shift + 2
	CD		Shift + 3
	Tape		Shift + 5
	VID1/VCR		Shift + 4
	VID2/TV		Shift + 1
	VID3/CBL/SAT		Shift + 0
	VID4		Shift + 7
	AM/FM		Shift + 6
	6 CH		Shift + 8
	Sleep		Sleep / Timer
	Test		Text / Goto
	Vol+		Vol+
	Surr.		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	Night		TV/Radio /
	M-Room		Zoom / Size
	Vol-		Vol-
	CH.		Info / Angle
	Up		Up
	SPKR/Menu		Menu / Home
	Left		Left
	Set		OK
	Right		Right
	Digital		D.Menu / Top
	Down		Down
	Delay/Normal		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5




Originalfernbedienung Ersatzfernbedienung

6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
TUN-M	Tun-M	NETFLIX SEARCH	Red / Netflix / Search
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
MEM	Mem	APP REPEAT	Green / APP / Repeat
TUNING ▲	Tuning ▲	TUNE+ ▶▶	>> / Tune+
DIRECT	Direct	RETURN BACK	Back / Return
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
PRESET ▲	Preset ▲	PRESET+ ▶▶	>>I / Preset+
TUNING ▼	Tuning ▼	TUNE- ◀◀	<< / Tune-
OSD	OSD	MEDIA DISPLAY	Display / Media
RDS	RDS	RDS AV INPUT	AV / Input / RDS
PRESET ▼	Preset ▼	PRESET- ◀◀	I<< / Preset-
<< DVD	<< DVD	SHIFT + TUNE-	Shift + << /
Play DVD	Play DVD	SHIFT + SLOW ▶	Shift + Play / Slow












 











 










Originalfernbedienung Ersatzfernbedienung

>> DVD	>> DVD	SHIFT + TUNE+	Shift + >> /
Stop DVD	Stop DVD	SHIFT + HOLD	Shift + Stop /
Pause DVD	Pause DVD	SHIFT + STEP - FREEZE	Shift + Pause / Step /
I<</Skip Down	I<</Skip Down	SHIFT + PRESET-	Shift + I<< / Preset-
Skip Up/>>I	Skip Up/>>I	SHIFT + PRESET+	Shift + >>I / Preset+

 



 





 

 



 

 





 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power Off		Shift + Power
	Power On		Power
	Vol+		Vol+
	Night		TV/Radio /
	[≡] / M-Room		Zoom / Size
	Vol-		Vol-
	CH.		Info / Angle
	Up		Up
	SPKR/Menu		Menu / Home
	Left		Left
	Set		OK
	Right		Right
	Digital/Exit		D.Menu / Top
	Down		Down
	Delay/Normal		Setup / OPT /
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	Tun-M		Red / Netflix / Search
	9		9
	0		0
	Mem		Green / APP / Repeat
	Direct		Back / Return
	Clear		Exit / Cancel / Clear
	Preset ▲		Shift + >>I / Preset+
	RDS		AV / Input / RDS
	Preset ▼		Shift + I<< / Preset-
	<<		<< / Tune-
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Vol-		Vol-
	Vol+		Vol+
	SPKR/Menu		Menu / Home
	1		1
	Delay/Normal		Setup / OPT /
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Mem		Green / APP / Repeat
	RDS		AV / Input / RDS
	>>		>> / Tune+
	<<		<< / Tune-
	Play		Play / Slow
	Stop		Stop / Hold
	Direct		Back / Return
	Pause		Pause / Step / Freeze
	Preset ▲		CH+ / Page+
	>>		>> / Preset+
	<<		<< / Preset-
	Power (On/Off)		Mute / Dimmer
	PR+ VCR		Shift + CH+ /
	PR- VCR		Shift + CH- /
	Vol- VCR		Shift + Vol-
	Vol+ VCR		Shift + Vol+
	1 VCR		Shift + 1





Originalfernbedienung Ersatzfernbedienung

[2]	2 VCR	[SHIFT] + [DVD]	Shift + 2
[3]	3 VCR	[SHIFT] + [CD - STB]	Shift + 3
[4]	4 VCR	[SHIFT] + [VIDEO]	Shift + 4
[5]	5 VCR	[SHIFT] + [TAPE]	Shift + 5
[6]	6 VCR	[SHIFT] + [TUNER]	Shift + 6
[7]	7 VCR	[SHIFT] + [AUX - HDD]	Shift + 7
[8]	8 VCR	[SHIFT] + [USB]	Shift + 8
[9]	9 VCR	[SHIFT] + [BLUETOOTH]	Shift + 9
[0]	0 VCR	[SHIFT] + [HDMI - SAT]	Shift + 0
[CLEAR]	Clear VCR	[SHIFT] + [CLEAR / EXIT]	Shift + Exit / Cancel / Clear
[Play VCR]	Play VCR	[SHIFT] + [SLOW]	Shift + Play /
[Stop VCR]	Stop VCR	[SHIFT] + [HOLD]	Shift + Stop /
[Rec VCR]	Rec VCR	[SHIFT] + [REC MODE]	Shift + Rec / Rec Mode
[>> VCR]	>> VCR	[SHIFT] + [TUNE+]	Shift + >> /
[<< VCR]	<< VCR	[SHIFT] + [TUNE-]	Shift + << /

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	<>		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

