



Originalfernbedienung Ersatzfernbedienung

 Standby / On	 Power
 Function	 List
 Open / Close	 Eject
 Home Media	 Media
 Karaoke	 Guide
 Mic Vol+	 Ch +
 Mic Vol-	 Ch -
 Resolution	 Format
 Net Contents	 Shift + Media
 Key Lock	 Pre Ch
 Dimmer	 Shift + Mute
 Sleep	 Sleep
 Exit	 Exit
 Virtual 3D Sound	 3D
 Sound	 Dual
 Sound Retriever	 Shift + Dual
 CD/SACD	 AV

Originalfernbedienung Ersatzfernbedienung

 USB Rec	 Rec
 Display	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 D. Menu
 Menu / PopUp	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Home Menu	 Smart
 Return	 Back
 Tools	 Options
 Continued	 Shift + Play
 Skip Search	 Shift + Right





Originalfernbedienung Ersatzfernbedienung

	REV		<<
	Play		Play
	FWD		>>
	I<< / <II / <I		I<<
	Pause		Pause
	Stop		Stop
	>>I / I> / II>		>>I
	Audio		TV/R
	Subtitle		Subt
	Angle		Shift + Format
	Repeat		Text
	A-B		Shift + Text
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Shift + Exit
	Program / Red		Red
	Program / Red		Shift + Sleep
	RDS / Bookmark / Green		Green
	PTY / Zoom /		Yellow
	PTY / Zoom /		Shift + Eject
	Index / Blue		Blue

