



Originalfernbedienung Ersatzfernbedienung

	On		Power
	Mute		Mute / Dimmer
	T.Tone		Sound / Title
	Audio		Audio / Lang I/II
	EQ		Subtitle / EQ
	BD		Picture / Format
	A/D		Zoom / Size
	Sleep		Sleep / Timer
	Top		D.Menu / Top
	Setup		Setup / OPT /
	Auto		Text / Goto
	LIP Sync		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Volume+		Vol+
	GAME		Smart / List
	CH+		CH+ / Page+
	Volume-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	AUX1		1
	DVD		2
	CD		3
	VCR		4
	TUNE		6
	Standby		Shift + Power
	Dimmer		Shift + Mute / Dimmer
	Surr Mode		Shift + Sound / Title





Originalfernbedienung Ersatzfernbedienung



















 












	Stereo	SHIFT + AUDIO	Shift + Audio / Lang I/II
	Night	SHIFT + SLEEP	Shift + Sleep / Timer
	Input Up	SHIFT + [Up Arrow]	Shift + Up
	CH Sel	SHIFT + OK	Shift + OK
	Input Down	SHIFT + [Down Arrow]	Shift + Down
	Bass+	SHIFT + VOL+	Shift + Vol+
	DSS	SHIFT + SMART	Shift + Smart / List
	Treble+	SHIFT + CH PAGE +	Shift + CH+ /
	Bass-	SHIFT + VOL-	Shift + Vol-
	HT EQ	SHIFT + MEDIA DISPLAY	Shift + Display / Media
	Treble-	SHIFT + CH PAGE -	Shift + CH- /
	AUX2	SHIFT + 2	Shift + 2

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Audio		Audio / Lang I/II
	Volume-		Vol-
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow









Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
	CLR		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Tune-		<< / Tune-
Tune+		>> / Tune+
Preset-		I<< / Preset-
Preset+		>>I / Preset+
Band		Sound / Title
PTY		Picture / Format
T.Mode		D.Menu / Top
Menu		Menu / Home
Info		Info / Angle
Enter		OK
Volume+		Vol+
Memo		Smart / List
Volume-		Vol-
Display		Display / Media
1		1

Originalfernbedienung Ersatzfernbedienung

2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0

