




 
 


 
 
 

 
 
 

 












 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	ATV/DTV		Smart
	NR.		Play
	Still		Pause
	Aspect		Format
	Sleep		Sleep
	Nicam/A2		Dual
	Surround		List
	Bass		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Volume+		Vol +
	Volume-		Vol -
	Channel+		Ch +
	Channel-		Ch -
	Source		AV
	Picture		Shift + Format
	Sound		Shift + Dual
	Info		Info
	ATV Menu		Menu
	DVB Menu		D. Menu
	Exit		Exit
	TTX		Text


 


 
 
 



 




Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG / [≡i]		Guide
	FAV / [≡♦]		Pre Ch
	Sub-T / [≡□]		Subt
	Audio / [≡X]		Media
	TV/RD / [≡◉]		TV/R
	Timer / [≡?]	 +  Shift + AV	AV
	[≡◇]		3D
	[≡...]	 +  Shift + Subt	Subt

Originalfernbedienung Ersatzfernbedienung

	PIP On/Off	 +  Shift + 1
	PIP Position	 +  Shift + 2
	PIP Size	 +  Shift + 3
	PIP Window	 +  Shift + 4
	PIP Swap	 +  Shift + 5

