











 


 
 
 
 

 

 

 

 
 
 

 

 


 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject
	TV		TV/R
	DV		Smart
	AV		AV
	Scan		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ADD/Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Navigation		Pre Ch
	Menu		Menu
	Setup		Options
	Title		List
	Up		Up
	Down		Down
	Select		Ok
	Right		Right
	Left		Left
	Rec/OTR		Rec
	Edit		Guide
	Timer		Shift + AV
	Play		Play
	Stop		Stop
	Pause/Step		Pause
	Mute		Mute
	CH+		Ch +





Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Disc Oper		Blue
	Return		Back
	Repeat		Text
	Zoom	+	Shift + Eject
	Slow	+	Shift + Play
	Display		Info
	Prog		Sleep

Originalfernbedienung Ersatzfernbedienung

	Random		Yellow
	PS/IS		Format
	Goto		3D

