











**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |                                       |
|---|--------|---|---------------------------------------|
|    | Mute   |    | Mute / Dimmer                         |
|    | Zoom   |    | Zoom / Size                           |
|    | Power  |    | Power                                 |
|    | Info   |    | Info / Angle                          |
|    | PIC    |    | Picture / Format                      |
|    | Sound  |    | Sound / Title                         |
|    | Freeze |    | Pause / Step / Freeze                 |
|    | Sleep  |    | Sleep / Timer                         |
|    | [--]   |    | Shift + D.Menu / Top Menu             |
|    | [   ]  |    | Shift + Info / Angle                  |
|   | A-Scan |   | Shift + Yellow / YouTube / REPEAT A-B |
|  | Vol-   |  | Vol-                                  |
|  | Vol+   |  | Vol+                                  |
|  | CH-    |  | CH- / Page-                           |
|  | CH+    |  | CH+ / Page+                           |
|  | Menu   |  | Menu / Home                           |
|  | Up     |  | Up                                    |

**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | Source     |    | AV / Input / RDS      |
|    | Left       |    | Left                  |
|    | OK         |    | OK                    |
|    | Right      |    | Right                 |
|    | DTV Menu   |    | D.Menu / Top          |
|    | Down       |    | Down                  |
|    | Exit       |    | Exit / Cancel / Clear |
|    | EPG        |    | Guide / EPG / -/-     |
|    | <<         |    | << / Tune-            |
|    | >>         |    | >> / Tune+            |
|   | Rec        |   | Rec / Rec Mode        |
|  | TTX        |  | Text / Goto           |
|  | Play/Pause |  | Play / Slow           |
|  | Stop       |  | Stop / Hold           |
|  | -/Supage   |  | Shift + Down          |
|  | I<<        |  | I<< / Preset-         |
|  | I>>        |  | I>> / Preset+         |



