 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eco		3D
	CH/Page+		Ch +
	CH/Page-		Ch -
	Sleep		Sleep
	Mute		Mute
	Volume+		Vol +
	Volume-		Vol -
	Info		Info
	Option		Options
	Setup		Menu
	Back		Back
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Stop		Stop
	Home		Smart
	>>I/Tune+		>>I
	I<</Tune-		I<<
	>>		>>
	<<		<<
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5




 

 




**Originalfernbedienung Ersatzfernbedienung**

	6		6
	7		7
	8		8
	9		9
	0		0
	Smart Select 1		Text
	Smart Select 2		AV
	Smart Select 3		Format
	TV Audio		TV/R
	Smart Select 4		D. Menu
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7

**Originalfernbedienung Ersatzfernbedienung**

	Phono		Shift + 9
	AUX2		Shift + 8
	iPod / USB		Guide
	Internet Radio		Pre Ch
	Media Player		Shift + Guide
	CD		Shift + 0
	Online Music		Shift + Pre Ch

 



 



 








 


 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CH/Page+		Ch +
	CH/Page-		Ch -
	Sleep		Sleep
	Mute		Mute
	Volume+		Vol +
	Volume-		Vol -
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Home		Smart
	Stop		Stop
	Pause		Pause
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	<<		<<
	>> /Tune+		>>
	<</Tune-		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Smart Select 1		Text
	Smart Select 2		AV
	Smart Select 3		Format





Originalfernbedienung    Ersatzfernbedienung

	Smart Select 4		3D
	TV Audio		TV/R
	Media Player		Shift + Guide
	Internet Radio		Pre Ch
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	iPod / USB		Guide
	CD		Shift + 0
	Online Music		Shift + Pre Ch

Originalfernbedienung    Ersatzfernbedienung

 




 
 

 











 




 
 



 








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	CH/Page+		Ch +
	CH/Page-		Ch -
	Sleep		Sleep
	Mute		Mute
	Volume+		Vol +
	Volume-		Vol -
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Home		Smart
	Stop		Stop
	Pause		Pause
	Play		Play







 






**Originalfernbedienung Ersatzfernbedienung**

	>> /Tune+		>>
	<</Tune-		<<
	<<		<<
	>>		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Smart Select 1		Text
	Smart Select 2		AV
	Smart Select 3		Format





**Originalfernbedienung Ersatzfernbedienung**

	Smart Select 4		3D
	TV Audio		TV/R
	Media Player	 + 	Shift + Guide
	Internet Radio		Pre Ch
	CBL/SAT	 + 	Shift + 1
	DVD	 + 	Shift + 2
	Blu-ray	 + 	Shift + 3
	AUX1	 + 	Shift + 4
	Tuner	 + 	Shift + 5
	Bluetooth	 + 	Shift + 6
	Game	 + 	Shift + 7
	AUX2	 + 	Shift + 8
	Phono	 + 	Shift + 9
	iPod / USB		Guide
	CD	 + 	Shift + 0
	Online Music	 + 	Shift + Pre Ch

**Originalfernbedienung Ersatzfernbedienung**