 





 




 
 


 



 





 




 




 


 
 

 


 
 




Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	INPUT		AV
	PIC. MODE -		4
	PIC. MOD. - STANDARD		5
	PIC. MODE -		6
	USER 1		1
	USER 2		2
	USER 3		3
	LENS		Info
	RESET		Exit
	MENU		Menu
	UP		Up
	LEFT		Left
	ENTER		Ok
	RIGHT		Right
	DOWN		Down
	GAMMA		7

Originalfernbedienung Ersatzfernbedienung

	Black Level		Back
	ADVANCED IRIS		8
	COLOR SPACE		9
	COLOR TEMP		0
	WIDE MODE		Red
	RCP		Green
	ADJ. PIC.		Yellow
	SHARPNESS+		Smart
	SHARPNESS-		Media
	BRIGHT.+		Vol +
	BRIGHT.-		Vol -
	CONTRAST+		Ch +
	CONTRAST-		Ch -



CORRECTION