



**Originalfernbedienung Ersatzfernbedienung**

	Power On		Power
	Standby		Shift + Power
	Input		AV
	Mute		Mute
	Vol Up		Shift + Right
	Vol Down		Shift + Left
	Volume+		Vol +
	Volume-		Vol -
	T/V/CH Level		Smart
	CH/Album Up		Ch +
	CH/Album Down		Ch -
	Up		Up
	Down/Search		Down
	Sel >		Right
	< Sel		Left
	Enter		Ok
	Play		Play

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	</Pause		Pause
	>> /Preset+		>>
	<</Preset-		<<
	>>/Tune+		>>
	<</Tune-		<<
	Setup/Home		Media
	Test/Disc Menu		Menu
	Dimmer/Return		Back
	Display		Info
	RDM/Room2		Exit
	Audio		Options
	Surround/Play List >		Green
	< Surround/Play List		Red
	Stereo/Play M		TV/R
	1 / Tuner		1
	2 / CD		2





**Originalfernbedienung Ersatzfernbedienung**

F.AUX <b>3</b>	3 / F.Aux	<b>3</b>	3
TAPE <b>4</b>	4 / Tape	<b>4</b>	4
BT IN <b>5</b>	5 / BT In	<b>5</b>	5
VIDEO 1 <b>6</b>	6 / Video 1	<b>6</b>	6
VIDEO 2 <b>7</b>	7 / Video 2	<b>7</b>	7
VIDEO 3 <b>8</b>	8 / Video 3	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0
<b>+10</b>	10	<b>-/--</b> GUIDE	Guide
EXT.IN <b>D</b>	Ext In	<b>D</b>	Blue
SLEEP <b>SLEEP</b>	Sleep	<b>PROG</b> SLEEP	Sleep
AVR <b>SHIF</b> + <b>1</b>	AVR	<b>SHIF</b> + <b>1</b>	Shift + 1
RECALL DOCK <b>SHIF</b> + <b>2</b>	Dock	<b>SHIF</b> + <b>2</b>	Shift + 2
SELECT CD <b>SHIF</b> + <b>3</b>	CD	<b>SHIF</b> + <b>3</b>	Shift + 3
AUX <b>SHIF</b> + <b>4</b>	AUX	<b>SHIF</b> + <b>4</b>	Shift + 4
BD <b>SHIF</b> + <b>5</b>	BD	<b>SHIF</b> + <b>5</b>	Shift + 5
TV <b>SHIF</b> + <b>6</b>	TV	<b>SHIF</b> + <b>6</b>	Shift + 6

**Originalfernbedienung Ersatzfernbedienung**

SAT	SAT	<b>SHIF</b> + <b>7</b>	Shift + 7
CBL	CBL	<b>SHIF</b> + <b>8</b>	Shift + 8










**Originalfernbedienung Ersatzfernbedienung**

	Power On		Power
	Standby		Shift + Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Setup/Home		Media
	Test/Disc Menu		Menu
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	I<<		I<<
	>>I		>>I
	Display		Info
	Dimmer/Return		Back

**Originalfernbedienung Ersatzfernbedienung**

	Audio		Dual
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0






 
 
 



 
 
 




**Originalfernbedienung Ersatzfernbedienung**

	Power On		Power
	Standby	 + 	Shift + Power
	RDM/Room2		Exit
	CH/Album Up		Ch +
	CH/Album Down		Ch -
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	I<<		I<<
	>>I		>>I
	Test/Disc Menu		Menu
	Display		Info
	Enter		Ok
	Up		Up
	Down		Down

**Originalfernbedienung Ersatzfernbedienung**

	Audio		Options
	< Surround/Play List		Red
	Surround/Play List >		Green
	Stereo/Play M		TV/R
	Sleep / Dock M.		Sleep

